

Welcome to purchase MCE Remote Control



Packaging Including:

***Remote control SRC-0149 1PC
MCE receiver 1set
Manual book***

Recorded



TV

Entering into the recorded program.



Switch into full screen.



When the receiver is changing the control status, the function of key will be changed as well.

Attention

1. Do not push the remote control buttons continuously when you find there is action delay, some kind of delay is caused by device itself rather than remote control.
2. Please take out the battery from remote control if you don't use it for long time to avoid battery leaking. Note the polarity of battery when you put into the battery again.
3. Working distance will be influenced a lot if there is no enough power in the battery.

My Radio Blue Button

Use for entering into My Radio option directly when you press it.

DVD/VCD Menu Yellow Button

Entering into DVD or VCD playing.

Audio Green Button

Switching the sound mode under DVD and VCD playing.

Title Red Button

Switching the text under DVD, VCD playing.

Guide

Entering into the program list ,You can enter into the program list directly with it under different mode.

Please check the items in packing to see whether it is correct or not.
If you have any question or doubt, please contact us soon.

Please playing directly without any drive for this remote control,its working just rely on IR of MCE receiver but without any reaction to the other IR products.

RC Installation

1.Device Request

 
Support USB input of PC /IPC/Monitor etc (for the other devices which must be setup before using),and not less than one port of USB in working .

2.Batteries Installation of RC

Install two pieces of AAA batteries referring to the polarity mark inside the battery compartment. Please renew the batteries in time during to avoid the battery leaking to corrupt your product.

Remark:

Please refer to the polarity mark inside the battery compartment when you are installing.

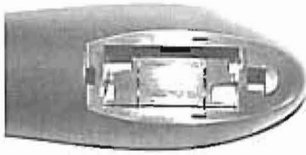

3.MCE Receiver Installation

The MCE receiver must be installed into USB1.1 or USB2.0 port.

It is Better to install the receiver into the USB port on the motherboard directly.

RC Testing

Please press the mouse switch key and then select the up/down/right/left key on remote control,if the LED of the receiver begins to be flashing,and mouse cursor moves in the accordingly direction,It proves that your installation is correct.

(Working distance: 8-10 meters)

CH/Page



Use for Channel switching up/down when you press it ,or ,use for the page turn over directly under WIN 2000,WIN XP, Powerpoint.

My Videos



Red Button

Use for entering into My Videos option directly when you press it.

My Music



Green Button

Use for entering into My Music option directly when you press it.

My Pictures



Yellow Button

Use for entering into My Pictures option directly when you press it.

My TV



Blue Button

Use for entering into My TV option directly when you press it .

Rew



FAST reverse.

Fwd



Fast forward.

Msn



Msn

Use for MSN software , You can replace it to any key what you wanted.

Aspect



You can change the screen display size by this button,like as your DVD or Video playing.

Mute



To shut down the sound by pressing this key . under WIN 2000 ,WIN XP System.

Volume



Use for sound adjusting when you press it under WIN 2000,WIN XP System.

Button Instruction

PC Power



This key can be used to close the programme which is running,it also can be used to close the computer.It can be set up as the power switch on the open equipment which can support the USB keyboard to be used as power button.

TV Prower



Under the Microsoft MCE system, the full screen TV play mode can be entered by this key .You also can set up shortcut key of other software to achieve its start-up.

Start



It can start the Media Center function. You also can set up shortcut key of other software to achieve its start-up.

UP



The function under the MCE system of the Microsoft or most of the Media Center soft is move up option,after switch to the mouse function ,the function of this key is the moving up of mouse cursor,it also can move up the cursor in the document.

Left



Move to the Left.

Down



Works like move to select the option by down.

Right



Move to the right.

OK



Confirm your selections ,or use for enter key when you switch to mouse.

Back



Back up the previous list ,or use as the left key on mouse when you switch it ,or works as delete key in your document.

More



Back up the previous list .or use as left key on mouse when you switching as well for delete key in the document.

4

Record



You can make recording when you are watching TV or listening to FM radio under MCE system.

Play



Operate for PC camera , my music or recording program etc..

Pause



Use for your documents to be stopped in the short time,you can apply it in the different option.

Stop



Terminate your operation

Replay



Operate for playing previous document.

Skip



Operate the next one.

5